Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: http://www.renesas.com

April 1st, 2010 Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (http://www.renesas.com)

Send any inquiries to http://www.renesas.com/inquiry.



Notice

- 1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
- Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights
 of third parties by or arising from the use of Renesas Electronics products or technical information described in this document.
 No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights
 of Renesas Electronics or others.
- 3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
- 4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
- 5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
- 6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
- 7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
 - "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
- 8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.





R0E330850MSRC0

Emulation Memory Board for M32C/80 Series Compact Emulator

User's Manual

Keep safety first in your circuit designs!

• Renesas Technology Corporation and Renesas Solutions Corporation put the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

- These materials are intended as a reference to assist our customers in the selection of the Renesas Technology product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation, Renesas Solutions Corporation or a third party.
 Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, or infringement of
- Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, or infringement of
 any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application
 examples contained in these materials.
- All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation and Renesas Solutions Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor for the latest product information before purchasing a product listed herein. The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information published by Renesas Technology Corporation and Renesas Solutions Corporation by various means, including the Renesas home page (http://www.renesas.com).
- When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability or other loss resulting from the information contained herein.
- Renesas Technology semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
- The prior written approval of Renesas Technology Corporation and Renesas Solutions Corporation is necessary to reprint or reproduce in whole or in part these materials.
- If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
- Please contact Renesas Technology Corporation or Renesas Solutions Corporation for further details on these materials or the products contained therein.

Precautions to be taken when using this product

- This product is a development supporting unit for use in your program development and evaluation stages. In mass-producing your program you have finished developing, be sure to make a judgment on your own risk that it can be put to practical use by performing integration test, evaluation, or some experiment else.
- In no event shall Renesas Solutions Corporation be liable for any consequence arising from the use of this product.
- Renesas Solutions Corporation strives to renovate or provide a workaround for product malfunction at some charge or without charge.
 However, this does not necessarily mean that Renesas Solutions Corporation guarantees the renovation or the provision under any circumstances.
- This product has been developed by assuming its use for program development and evaluation in laboratories. Therefore, it does not
 fall under the application of Electrical Appliance and Material Safety Law and protection against electromagnetic interference when
 used in Japan.



WARNING indicates a potentially dangerous situation that will cause death or heavy wound unless it is avoided.

CAUTION indicates a potentially dangerous situation that will cause a slight injury or a medium-degree injury unless it is avoided.

This is used in operation procedures or explanatory descriptions to convey exceptional conditions or cautions to the user.

Renesas Tools Homepage http://www.renesas.com/tools

1. Outline

The R0E330850MSRC0 is an emulation memory board for the M32C/80 Series compact emulator. The memory space can be allocated to the emulation memory by using with the M32C/80 Series compact emulator M30850T3-CPE.


2. Package Components

Table 1 Package Components


Item	Quantity
R0E330850MSRC0 emulation memory board	1
Spacers for fixing the emulation memory board	4
R0E330850MSRC0 User's Manual (this document)	1
R0E330850MSRC0 User's Manual (Japanese)	1

3. Connection Procedure


The procedure for connecting the R0E330850MSRC0 is shown in Figure 1.

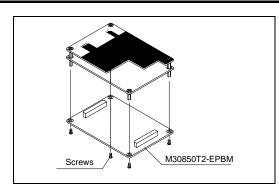

- (1) Unscrew the four screws securing the compact emulator.
- (2) Pull out the M30850T2-EPBM from the compact emulator control board (hereafter, upper board) vertically, otherwise the connectors may be damaged.

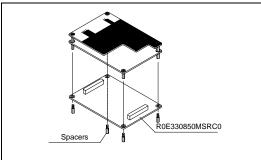

- (3) Attach connector J1 of the R0E330850MSRC0 to connector J3 of the upper board, and J2 of the R0E330850MSRC0 to connector J4 of the upper board.
- (4) Tighten the spacers (included) in an even, crisscross pattern to secure the R0E330850MSRC0 with such as box wrench.

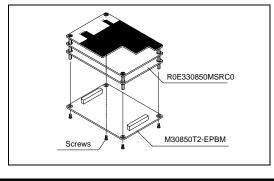

- (5) Attach connector J1 of the M30850T2-EPBM to connector J3 of the R0E330850MSRC0, and J2 of the M30850T2-EPBM to connector J4 of the R0E330850MSRC0.
- (6) Tighten the four screws (which are unscrewed in the procedure 1) in an even, crisscross pattern to secure the M30850T2-EPBM with a screwdriver.
- (7) After replacing the board, perform the self-check to make sure that the R0E330850MSRC0 has been installed properly.

Figure 1 Connecting procedure of the emulation memory board

⚠ CAUTION

Cautions to Be Taken for This Product:



- $\bullet \ \text{Before you replace the emulation memory board, shut off the power, otherwise internal circuits may be damaged. } \\$
- Insert or pull out the connectors vertically, otherwise the connectors may be damaged.

4. Usage (Emulator Debugger)

The required operating environment is described below.

- Integrated development environment:
- Emulator debugger:


High-performance Embedded Workshop

M32C Compact emulator debugger Ver.1.00 Release 00 or later

(The emulator debugger "M3T-PD308MF" can not be used.)

Set the emulation memory in the Emem dialog box of the emulator debugger start-up.


1. Specifying the processor mode

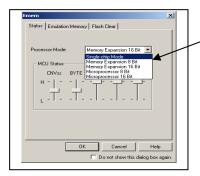

Specifying the processor mode

Select the appropriate processor mode that suits your system.

2. Emulation memory allocation for an extended area

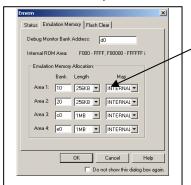

Emulation memory allocation for an extended area

When memory expansion or microprocessor mode is selected, emulation memory can be allocated to the extended area to be debugged (in up to four areas).

* Bank (Set bank address)

Specify the bank address of the debug target area to be allocated in hexadecimal. If specified as d0, D00000h is the start address of the debug target area.

* Length (Specify size of area)

Specify the size of the debug target area (256Kbytes or 1Mbytes). If Length is specified to be "256Kbytes", banks 00, 04, 08, and up to FC (every four banks) are specified for Bank; if Length is specified to be "1 Mbytes", banks 00, 10, 20 and up to F0 (every 16 banks) are specified for Bank.

* Map (Specify area map)

Specify the mapping information ("Internal" or "External") in the specified area. If no area is specified, select "No Use"

- Internal : The area specified to be "Internal" is mapped into the internal area (emulation memory).
- External: The area specified to be "External" is mapped into the external area (external resource in the user system)

IMPORTANT

Notes on Selecting a Processor Mode of the M30850T3-CPE:

- When setting single-chip mode, do not connect to this product.
- When setting memory expansion mode, the level of the pin CNVSS of the MCU status should be "L".
- When setting microprocessor mode, the level of the pin CNVSS of the MCU status should be "H".
- When setting memory expansion mode or microprocessor mode, the level of the pins RDY# and HOLD# of the MCU status should be "H"

Notes on Using Expansion Emulation Memory:

- MCU internal resources are automatically selected as SFR and RAM areas regardless of settings.
- For a reset vector area, memory of the emulator is always selected regardless of the setting
- When memory expansion mode is set as a processor mode, internal ROM area is automatically allocated to the internal Flash memory. Therefore, it is not necessary to deliberately specify expansion emulation memory in order to allocate the internal ROM area.
- The 4MB memory mounted in the product can be allocated to the external area. Set memory allocation so that the total of the 4 Length values does not exceed the emulation memory size (4MB). However, the emulation memory is 3.25MB in memory expansion mode.
- Be careful that the specified areas do not overlap one another.
- Except for the SFR, RAM, ROM and internally reserved areas, all areas other than the set area are externally accessible.
- In Map, the areas where "No Use" is selected, and is unspecified are allocated to external resources. When "External" is specified, only the downloaded speed is different.
- Do not set the following areas for memory allocation of the MCU. Set these areas referring the specifications of the MCU. (1) Area allocated for multiplex bus (2) Unusable area

5. Specifications

Applicable compact emulator	M30850T3-CPE
Size of emulation memory installed	4Mbytes
Applicable MCU mode	Memory expansion mode, Microprocessor mode
Applicable power supply	3.0 to 5.5 V
Maximum operating frequency	1Ø+1Ø: 32MHz*
Emulation memory allocation	Memory expansion mode: Maximum 3.25Mbytes
	Microprocessor mode: Maximum 4.00Mbytes

^{*}The restrictions in this product operating frequency depend on VCC2 power voltage.

(These restrictions only need to be observed when using an emulator.) (See Figure 2)

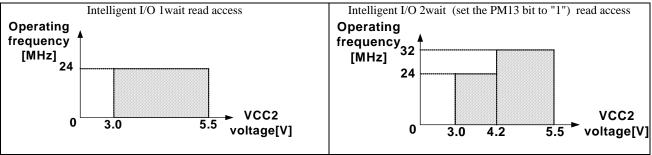


Figure 2 Restrictions in operating frequency when using this product

(When using in single-power supply: VCC1 = VCC2, When using in dual-power supply: VCC1 = 5.0 ± 0.2 [V] fixed)

6. Precautions

M WARNING

Warnings to Be Taken for This Product:



• Do not disassemble or modify this product. Personal injury due to electric shock may occur if this product is disassembled and modified. Disassembling and modifying the product will void your warranty.

Warning for Installation:



• Do not set this product in water or areas of high humidity. Make sure that the product does not get wet. Spilling water or some other liquid into the product may cause unrepairable damage.

Warning for Use Environment:



• This equipment is to be used in an environment with a maximum ambient temperature of 35°C. Care should be taken that this temperature is not exceeded.

⚠ CAUTION

Cautions to Be Taken for This Product:



- Use caution when handling this product. Be careful not to apply a mechanical shock.
- Do not touch the connector pins of this product directly. Static electricity may damage the internal circuits.

Caution to Be Taken for System Malfunctions:



- If the emulator malfunctions because of interference like external noise, do the following to remedy the trouble.
 - (1) Press the RESET button on the emulator upper panel.
 - (2) If normal operation is not restored after step (1), shut OFF the emulator once and then reactivate it.

Caution to Be Taken for Using with M30850T2-CPE and M30870T2-CPE:



• Do not use this product with M30850T2-CPE and M30870T2-CPE.

7. Inquiries

For inquiries about this product or the contents of this manual, contact your local distributor.

Renesas Tools Homepage http://www.renesas.com/tools